


Cradley East.

SPACES :- 9-12-28-30-31-34.

OPEN CONTINUOUSLY.

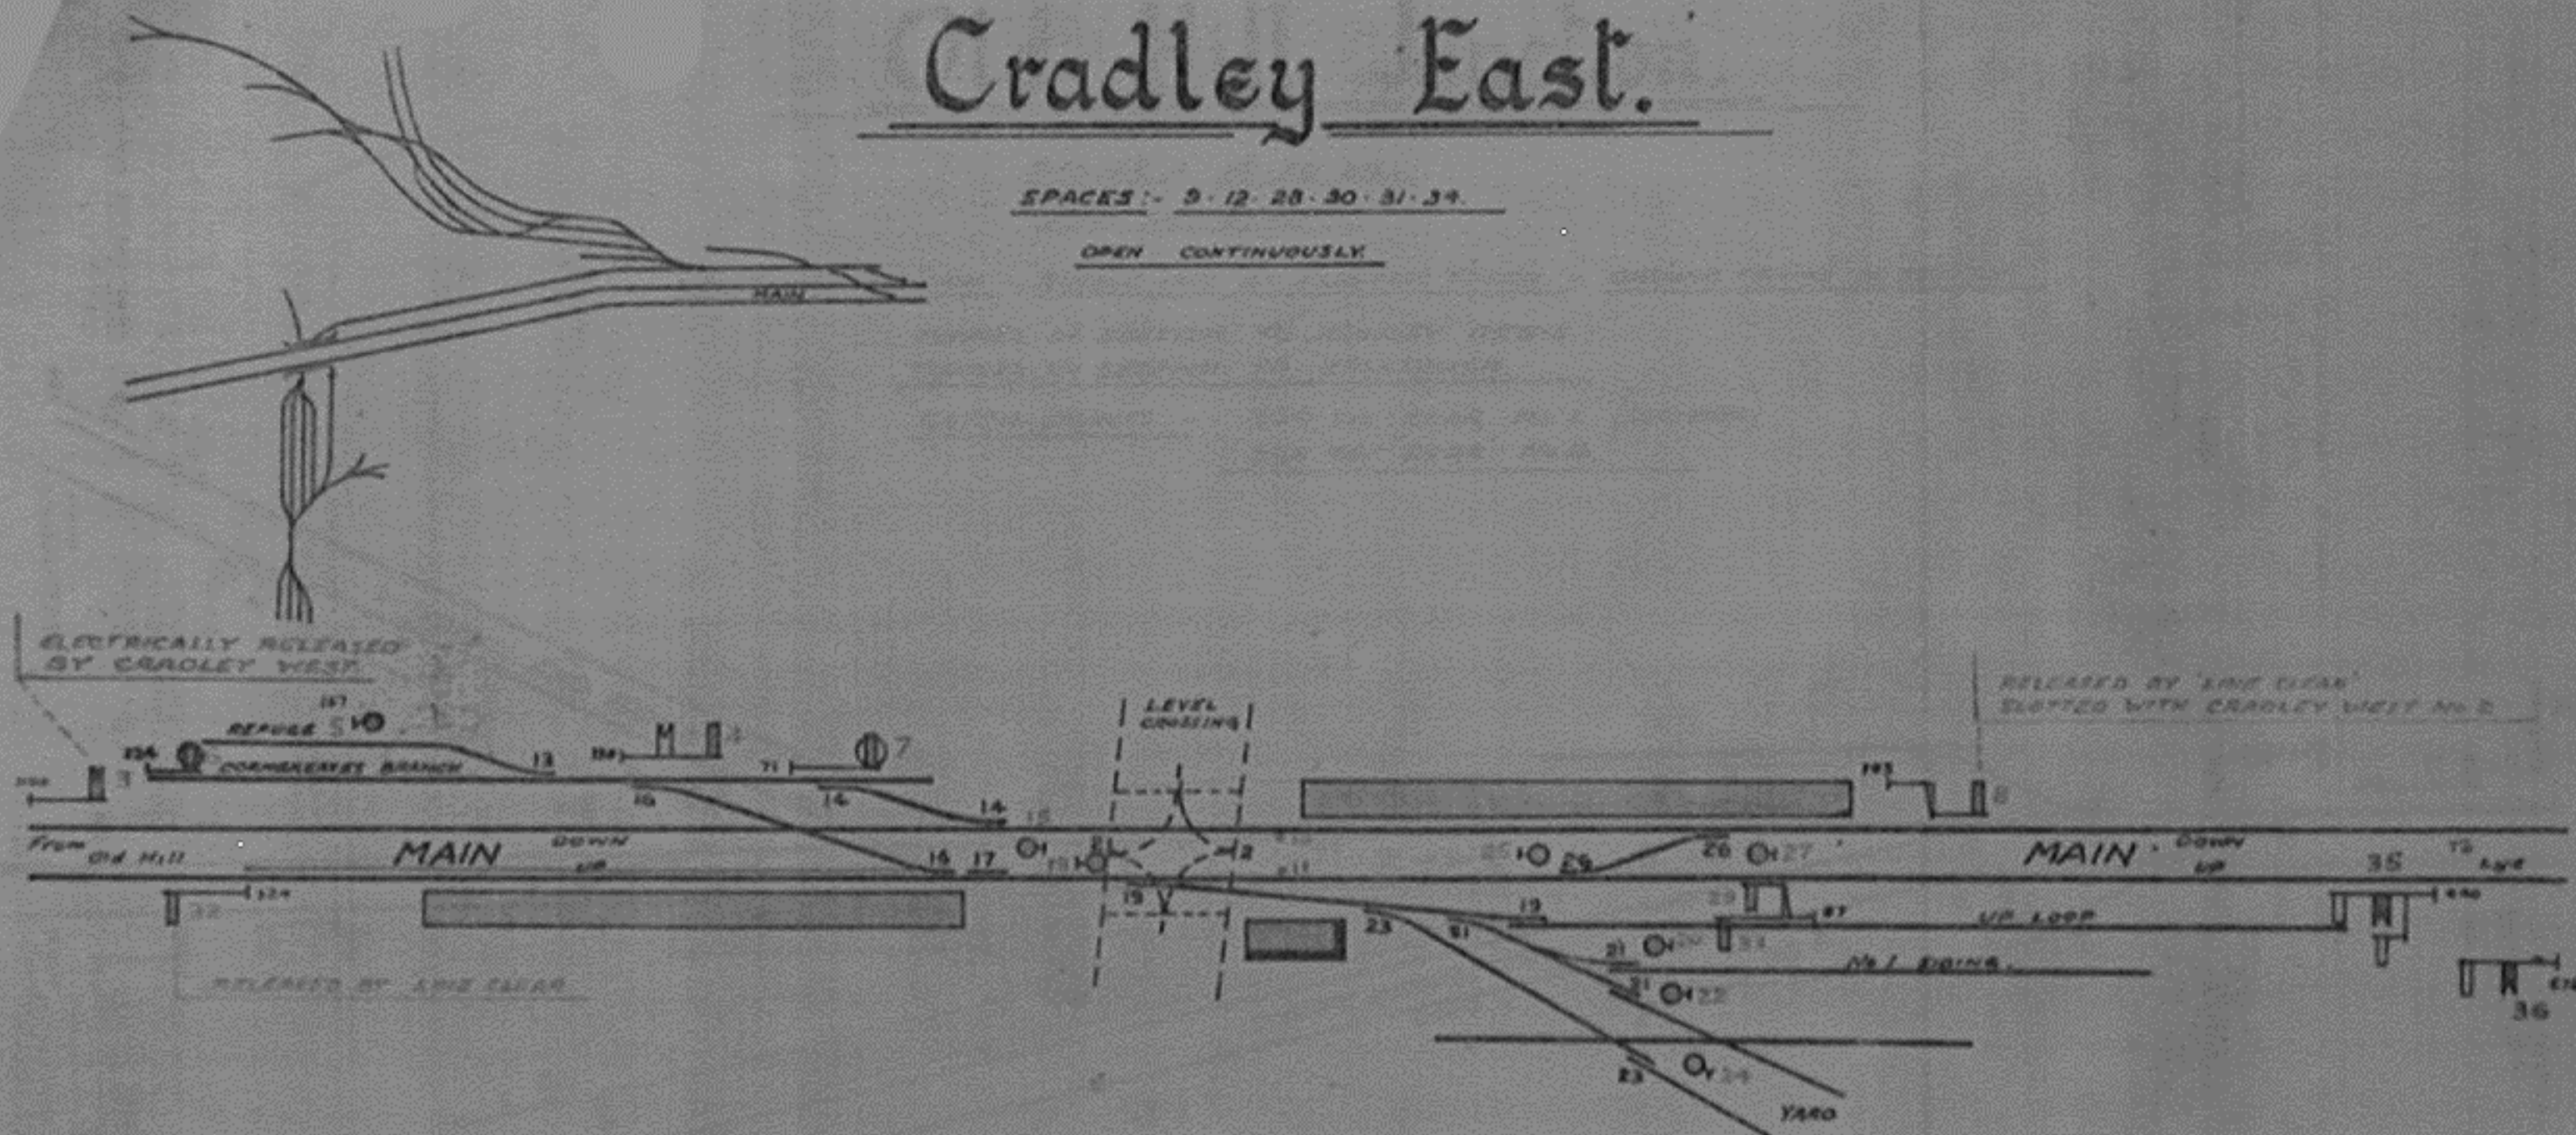

UP TRAINS :- Ask Thru when 1-2-1 rec'd when Cradley West open.
In order to avoid Runaway, when it is necessary to default
vehicle from UP Pass, Point 13 must be set for loop or
Siding as soon as last vehicle is clear of them.

DOWN TRAINS :- Ask Thru when Asked For.
3-5-5 Allowed for L.E.
1-2-1 Sent when "ON LINE" received

WRONG LINE WORKING TO CRADLEY WEST FOR L.E. or E-V UNDER 1-6 signal.
See Sp. Instructions for working Corncreaves Branch.
Trains for Corncreaves signalled IN as Branch Trains.