

FOWEY

Nº	RELEASED BY	LOCKS IN NORMAL POSITION	LOCKS IN EITHER POSITION	RELEASES
1	13	14	26	
2	33 34	1 37 (13 N 26 N)		
3		7 37 40	32 34 36 (33 N 34 R) (35 N 34 N)	
4		2 3 37 40	32 34 36 (33 N 34 R) (35 N 34 N)	
5	7 9			
6	7 (15 or 16)			
7	10	18 19 24 30 39 (25 N 17 R 21 23 N)	38	5 6 (11 W 10 R 38 N)
8	(9 or 15 or 16)	10		
9	17	11 24 39 (30 N 26 N) (27 N 21 23 N)	7 10 21 23	3 (8)
10		8 13 14 (30 N 26 R)		7
11	(7 W 10 R 38 N)	9 15 16	10 12 17	
12		16 19		15 17 18
13		10 30 40 (2 37 N 26 N)	38	1 (14 W 38 N)
14	(13 W 38 N)	10 1 25	26 27 (29 N 26 R)	
15	12	11 17 18 24 (30 N 26 N) 40	7 10	(6) (8)
16		11 12 19 24 40 (30 N 26 N)	7 10	(6) (8)
17	12	15 18 40		9 39
18	12	7 15 17 24 40 (30 N 26 N)	10	
19		7 12 16 24 40 (30 N 26 N)	10	
20	21	24 39	17	
21		23 32 (29 N 26 N)		20 (24)
22	23	24 39	17	
23		21 32 (29 N 26 N)		22 (24)
24	(21 or 23)	7 9 15 16 18 19 20 22		
25	26 29	14 30 (7 N 17 R 21 23 N)	13	
26	27			25
27		28 32 35 (9 N 21 23 N)		26
28	29	27 30 39	17	
29		32 (21 23 N 26 N)		25 28 30
30	29	7 13 25 28 (10 N 26 R) (9 15 16 18 19 N 26 N)	26	
31	32	39 40	17 35 36	
32		21 23 27 29 34		31 40
33			34	2
34		32 36		2 37
35		27		36
36	35	34		40
37	34	2 3 4 (13 N 26 N)	33	
38		7 13	10	
39	17	7 9 20 22 28 31	10 21 23 32 (29 N 26 N) (27 35 N 21 23 N) (36 N 21 23 29 N)	
40	32 36	3 4 13 15 16 17 18 19 31		

G.W.R. SIGNAL ENGINEER'S OFFICE

READING

21st SEPT 1933

LACKING TABLE FOR FOWEY

	Released by	Locks in Normal Position <u>Locks to come off</u>	Locks in Error Position	Released
1		38		
5		38		
6		38		
7		11		
11		7		
13		14		
14		13		
20			10	
22			10	
23			10	
31			10	
38		1.5.6		
		<u>Locks to go on</u>		
1		14		
7		38		(11W10R38N)
11	(7W10R38N)			
13		38		(14W38N)
14	(13W38N)	1		
38		7.13		

G.W.R. SIGNAL ENGINEER'S OFFICE

READING

24TH MARCH 1936

LACKING TABLE FOR FOWEY

	Released by	Locks in Normal Position <u>locks to go on</u>	Locks in Either Position	Releases
1	13		26	
2		4.37. (13W 26N)		
3		37		
4		2.37		
5	9			
6	(15 or 16)			
7	10	11. 18. 19. 24. 30. 39. (25W 17R 21. 23N).		
8	(9 or 15 or 16)	10		
9	17	24. 39. (27W 21. 23N). (30W 26N)	7. 10. 21. 23	5. (8)
10		8. 13. 14. (30W 26R)		7
11		7. 15	12	
12		16. 19		17. 18
13		10. 14. 30. 40 (2. 37W 26N)		1
14		10. 13.	(29W 26R)	
15		11. 18. 24. 40. (30W 26N)	10. 7. 10.	(6). (8)
16		12. 40	7. 10	(6). (8)
17	12	18		9. 39
18	12	7. 15. 17. 24. 40. (30W 26N)	10	
19		7. 12. 24. 40. (30W 26N)	10	
20			10	
22			10	
24		7. 9. 15. 18. 19.		
25		(7W 17R 21. 23N)		
28			10	
30		7. 13. (10W 26R). (9. 15. 18. 19. 26.)		
31			10	
34				37
37	34	2. 3. 4. (13W 26N)	33	
39	17	7. 9.	10	
40		13. 15. 16. 18. 19		
27		(9 W 21. 23N)		

G.W.R. SIGNAL ENGINEER'S OFFICE

READING

24TH MARCH 1936

LOCKING TABLE FOR FOWEY

	Released by	Locks in NORMAL Position	Locks in Either Position	Releases
1	7.33	<u>Locks to come off</u>		
1	7.33	12.37.(30W26R)		
2		(5W26N)	7.8.10.12	
5	13	14.37.40.(30W26R).(2W26N)	26	
6	15	21.23.27.29.32.37.39.	18.	
7	8	10		1
8			12	7
9	10	37.38		
10		7.12.17.40		9
11			(18W17R)	
12		1.10		13
13	12	15		5.14
14	13	5	7.8.29	
15		13		6.39
16	17		18.21.23	
17		10		16.19
18			15	19.24.39. 40.(30)
19	17.18	20.22.28.31.	21.23.32.(29W26N) (27.35W21.23N) (34.36W21.23.29N)	
20		19	15.18.(7.8W15R)	
21		6		
22		19	15.18.(7.8W15R)	
23		6		
24	18			
25			(7.8W13R)	
27		6		
28		19	15.18.(7.8W15R)	
29		6		
30	(18W25N)	(1.5W26R)		
31		19	15.18.(7.8W15R)	
32		6		
33				1
37		1.5.6.9.38	7.8.10.12.13.15.(18W15R)	
38		9.37.	8.12.15.(18W15R)	
39	15.18	6	7.8.(34W21.23.29N)	
40	18	5.10		

Locking table for Fowey Stn.

No.	Released by	Locks Normal	Locks both ways
1	7.33.	12.14.37.(30w26R).	
2	33.34.	(5w26N).	7.8.10.12.
3		4.40.	32.34.36.(33w34R).(35w34N).
4		3.40.	32.34.36.(33w34R).(35w34N).
5	7.13.	14.37.40.(30w26R).(2w26N).	26.
6	7.15.	21.23.27.29.32.37.39.	18.
7	8.	10.38.	
8		10.	12.
9	10.	11.37.38.	
10		7.12.17.40.	
11	(7w10R38N).	9.16.	10.17.(18w17R).
12		1.10.	
13	12.	15.38.	
14	(13w38N).	1.5.25.	7.8.26.27.29.
15	12.	13.17.	
16	17.	11.19.24.(30w26N).	18.21.23.
17		10.15.40.	
18			15.
19	17.18.	16.20.22.28.31.	21.23.32.(29w26N).(27.35w21.23N). (34.36w21.23.29N).
20	21.	19.24.39.	15.17.18.(7.8w15R).
21		6.23.32.(29w26N).	
22	23.	19.24.39.	15.17.18.(7.8w15R).
23		6.21.32.(29w26N).	
24	18.(23OR21).	16.20.22.	
25	26.29.	14.30.	13.(7.8w13R).
26	27.		
27		6.28.32.35.	
28	29.	19.27.30.39.	15.17.18.(7.8w15R).
29		6.32.(21,23w26N).	
30	29.(18w25N).	25.28.(1,5w26R).(16w26N).	26.
31	32.	19.39.40.	15.17.18.35.36.(7,8w15R).
32		6.21.23.27.29.34.	
33			34.
34		32.36.	
35		27.	
36	35.	34.	
37		1.5.6.9.38.	7.8.10.12.13.15.(18w15R).
38		7.9.13.37.	8.10.12.15.(18w15R).
39	15.18.	6.20.22.28.31.	7.8.21.23.32.(27,35w21,23N).(29w26N). (34,36w21,23,29N).
40	18.32.36.	3.4.5.10.17.31.	
Fowey Stn. LOCKING TABLE prior to March 1936			S1111/3

Locking table for Fowey Stn.

No.	Released by	Locks Normal	Locks both ways
1	13.	14.	26.
2	33.34.	4.37.(13w26N).	
3		4.37.40.	32.34.36.(33w34R). (35w34N).
4		2.3.37.40.	32.34.36.(33w34R). (35w34N).
5	7.9.		
6	7.(15OR16).		
7	10.	18.19.24.30.38.39.(25w21,23N17R).	
8	(15OR9OR16).	10.	
9	17.	11.24.39.(27w23,21N).(30w26N).	7.10.21.23.
10		8.13.14.(30w26R).	
11	(7w10R38N).	9.15.16.	10.12.17.
12		16.19.	
13		10.30.38.40.(2,37w26N).	
14	(13w38N).	1.10.25.	26.27.(29w26R).
15	12.	11.17.18.24.40.(30w26N).	7.10.
16		11.12.19.24.40.(30w26N).	7.10.
17	12.	15.18.40.	
18	12.	7.15.17.24.40.(30w26N).	10.
19		7.12.16.24.40.(30w26N).	10.
20	21.	24.39.	17.
21		23.32.(29w26N).	
22	23.	24.39.	17.
23		21.32.(29w26N).	
24	(23OR21).	7.9.15.16.18.19.20.22.	
25	26.29.	14.30.(7w21,23N17R).	13.
26	27.		
27		28.32.35.(9w23,21N).	
28	29.	27.30.39.	17.
29		32.(21,23w26N).	
30	29.	7.13.25.28.(9,15,16,18,19w26N). (10w26R).	26.
31	32.	39.40.	17.35.36.
32		21.23.27.29.34.	
33			34.
34		32.36.	
35		27.	
36	35.	34.	
37	34.	2.3.4.(13w26N).	33.
38		7.13.	10.
39	17.	7.9.20.22.28.31.	10.21.23.32. (27,35w21,23N).(29w26N). (36w21,23,29N).
40	32.36.	3.4.13.15.16.17.18.19.31.	
Fowey Stn. LOCKING TABLE after March 1936			S1111/3