

YELVERTON — BRASS PLATE c1895

1	2	3	4	5	6	7	12	13
UP DISTANT —	UP HOME —	UP MAIN STOP	UP MAIN STARTING	UP MAIN TO BRANCH STOP	DOWN BRANCH STARTING	DOWN BRANCH ADVANCED STARTING	UP MAIN FACING UNBOLTED	UP MAIN FACING UNBOLTED
23 20	15	—	—	—	—	—	—	—
15 14	12	15	23	STOP	20			
12 15	OR			—			BOLTED	BOLTED
4 12	20			20			FOR	FOR
3 7	14			14			UP	DOWN
2 6	15			15			MAIN	MAIN
OR 5	12							
2								

14	15	16	17	18	19	20	21	22
UP MAIN FACING — TO BRANCH	POINTS No. 14 UNLOCKED — LOCKED — NIL OR 14	DOWN MAIN — FROM BRANCH	UP BRANCH FACING — DOWN MAIN — 16	POINTS No. 17 UNLOCKED — LOCKED — 16 17	DOWN BRANCH FACING — BRANCH SIDING	POINTS No. 19 UNLOCKED — LOCKED	DOWN MAIN FROM SIDING — DOWN MAIN	DOWN SIDING SAFETY OPEN — SHUT

23	24	28	29	30	31	32	33	34
DOWN MAIN FACING — UP MAIN	POINTS No. 23 UNLOCKED — LOCKED	DOWN ADVANCED STARTING — 13	UP BRANCH TO MAIN STARTING — 16 17 18	UP BRANCH TO MAIN HOME — 16 17 18	UP BRANCH TO MAIN DISTANT — 13 16 17 18 28 29 30	DOWN MAIN STARTING	DOWN SIDING STARTING — 22	DOWN MAIN HOME — 21 24

35
DOWN
MAIN
DISTANT
—
13
21
24
28
32
34