

42  
CLEARANCE  
BAR  
IN  
MAIN  
LOOP

44  
F.P.L.S  
FOR  
Nos 35  
AND 43  
NIL  
OR  
42  
43  
OR  
35  
OR  
42  
43  
35

BRASSES

FROM PHOTO -

OLD BOX

DOVEY JCN

S

171

2  
UP  
MAIN  
HOME  
(SLOT)  
16

3  
UP  
MAIN  
INNER  
HOME  
16

4  
UP  
MAIN  
STARTING  
48  
[ PUT  
BACK  
44 ]

5  
UP  
MAIN  
INNER  
HOME  
TO  
MAIN  
LOOP  
18  
16

6  
UP  
MAIN  
LOOP  
STARTING  
TO  
MAIN

7  
UP  
BRANCH  
DISTANT  
8  
9  
10  
13

8  
UP  
BRANCH  
HOME  
24

9  
UP  
BRANCH  
INNER  
HOME  
35  
24

10  
UP  
BRANCH  
STARTING  
TO  
MAIN  
48  
[ PUT  
BACK  
44 ]  
41  
35

11  
UP  
BRANCH  
INNER  
HOME  
TO  
BRANCH  
LOOP  
39  
25  
24

12  
UP  
BRANCH  
LOOP  
STARTING  
TO  
MAIN  
48  
[ PUT  
BACK  
44 ]  
40  
39

13  
UP  
MAIN  
ADVANCED  
STARTING

16  
FPL  
FOR  
18B

17  
FOULING  
BAR  
IN UP  
MAIN

18  
UP  
MAIN  
& DOWN  
MAIN  
LOOP  
FACINGS  
MAIN  
LOOP  
17

19  
DISC  
FOR  
20  
20

20  
MAIN  
LOOP  
SPUR  
SAFETY

21  
FPL  
FOR  
18A

22  
DISC  
FOR  
20  
20  
21

24  
FPL  
FOR  
25B

DOVEY JCN

S3153/7/

25  
UP  
BRANCH  
& DOWN  
BRANCH  
LOOP  
FACINGS  
BRANCH  
LOOP

26  
FPL  
FOR  
25A

27  
UP  
BRANCH  
LOOP  
STARTING  
TO  
BACK  
SIDING  
39  
28

28  
BACK  
SIDING  
SAFETY

29  
DISC  
FOR  
28  
26  
28

33  
UP  
BRANCH  
STARTING  
TO  
BRANCH  
SIDING  
36  
35

34  
UP  
BRANCH  
STARTING  
TO  
SPUR  
45  
41  
35

35  
FPL  
FOR  
41A

36  
BRANCH  
SIDING  
SAFETY

37  
DISC  
FOR  
36  
36

38  
UP  
BRANCH  
LOOP  
STARTING  
TO  
SPUR  
45  
40  
39

39  
FPL  
FOR  
40A

40  
DOWN  
BRANCH  
& UP  
BRANCH  
LOOP  
FACINGS  
BRANCH  
LOOP  
41

41  
DOWN  
MAIN  
& UP  
BRANCH  
FACINGS  
BRANCH

42  
UP  
MAIN  
STARTING  
TO  
SPUR  
45

43  
FPL  
FOR  
40B

44  
FPLs  
FOR  
41B  
&  
48A  
NIL  
OR  
41  
43

45  
SPUR  
SAFETY

DOVEY JCN

S 3153 / 7 / 2

46  
DISC  
FOR  
45  
44  
45  
OR  
41

44

45

OR

26

40

44

45

54

DOWN  
BRANCH  
LOOP  
STARTING  
25  
26

60

DOWN  
MAIN  
LOOP  
STARTING  
TO  
MAIN  
18  
21

47  
FOULING  
BAR  
IN  
MAIN  
LOOP

55

DOWN  
MAIN  
INNER  
HOME  
TO  
BRANCH  
LOOP  
26  
40  
48  
49

61

DOWN  
MAIN  
INNER  
HOME  
TO  
MAIN  
LOOP  
21  
49

48  
MAIN  
FACINGS  
MAIN  
47

56

DOWN  
BRANCH  
STARTING

62

DOWN  
MAIN  
STARTING

49  
FPL  
FOR  
48B  
NIL  
OR  
44  
48

57

DOWN  
MAIN  
INNER  
HOME  
TO  
BRANCH  
41  
48  
49

63

DOWN  
MAIN  
INNER  
HOME  
48  
49

53  
DOWN  
BRANCH  
ADVANCED  
STARTING

59

DOWN  
MAIN  
ADVANCED  
STARTING

64

DOWN  
MAIN  
HOME  
49