Stourbridge Junction South.

SPACES :- 5·6·7·8·62·63·64·65.

OPEN :- 6·0am MON. TO 10·0pm SUN.

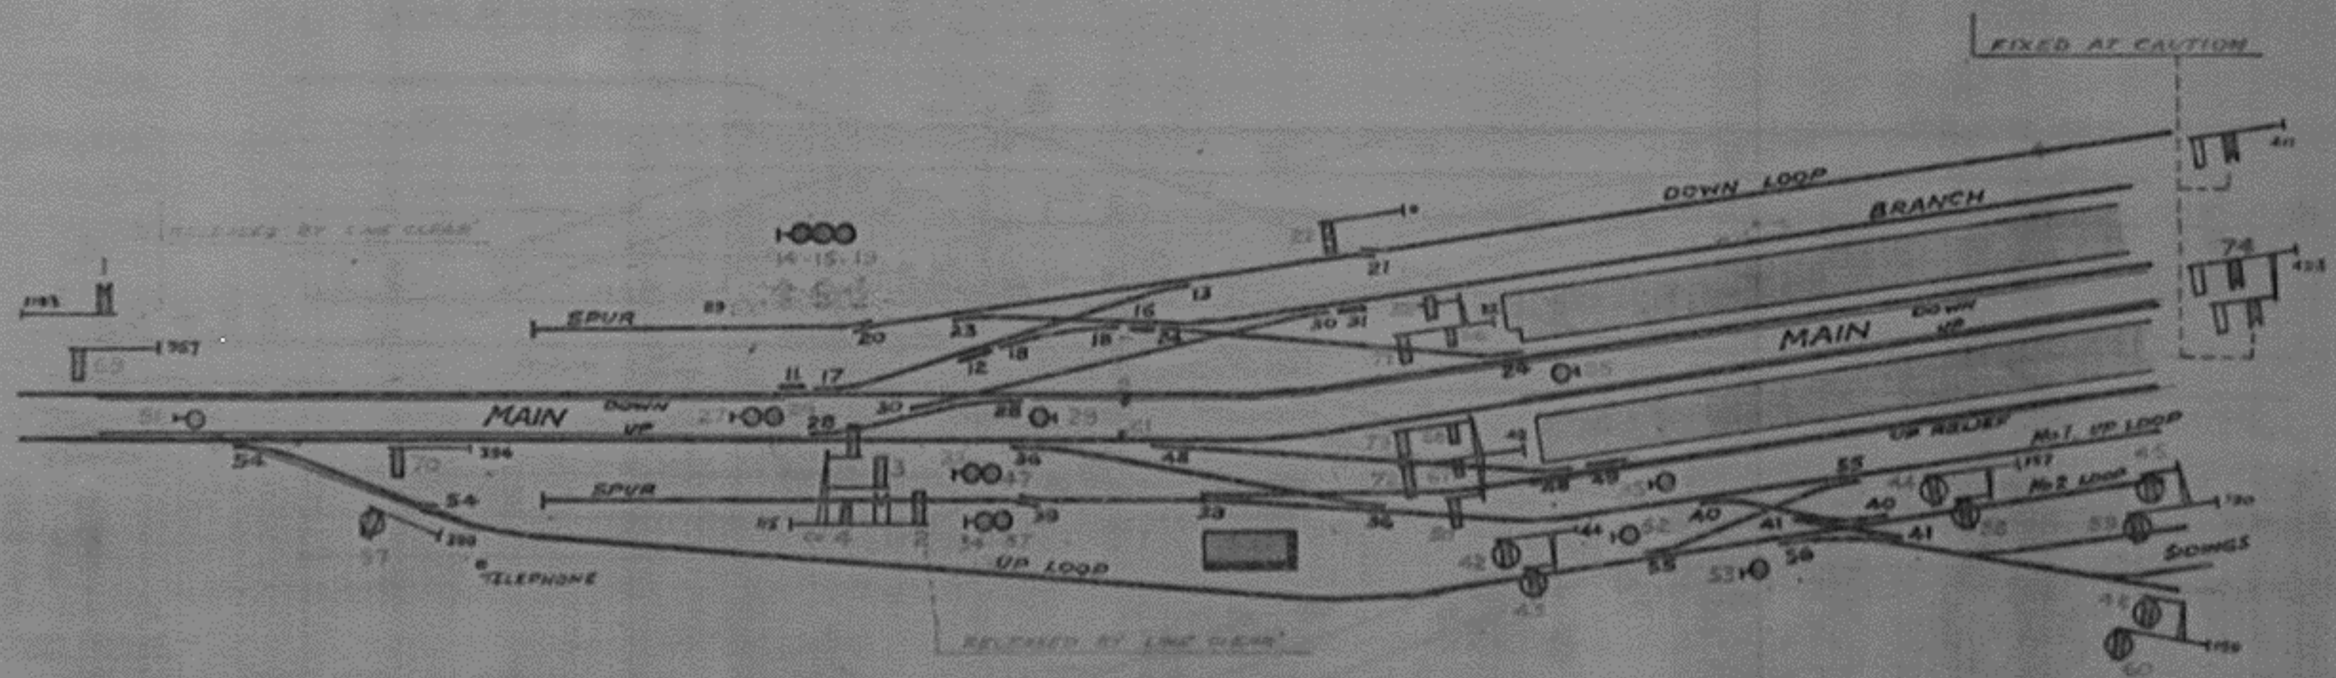

UP TRAINS :- All Trains for Main & Relief when Asked For.
Trains from B'ham Line signalled in as Branch Trains.

DOWN TRAINS :- 1·2·1 conf to Middle Box when "ON LINE" received.
3·5·5 Allowed.

WRONG LINE WORKING between SOUTH and MIDDLE - UP MAIN & UP RELIEF under 1-6. signal.
" " " " " " " - DOWN MAIN " 4-2. "
2nd Train admitted to UP MAIN - UP RELIEF - DOWN MAIN Platforms under 2·4·2 "

Reproduced by kind permission of Kidderminster Railway Museum